

Panelling Made Easy
Easy to Handle and Install
Revolutionary New Design
Waterproof Panels

GEO[®] panel

For Ceilings, Walls & Showers

**CEILING
& WALL PANELS**

**High Gloss decorative
ceiling & wall panels**

- 2.7m Long x 250mm Wide tongue and groove panels.
- 2.7m Long x 200mm wide 2-strip panels.
- Geo-Panel PVC panels for all walls and ceilings in showers, bathrooms, kitchens, conservatories, extensions and utility rooms.
- 100% Waterproof PVC core.
- Light and easy to fit.
- No wet trades required.
- Suitable for both wet and dry areas.
- Non-porous, hygienic, mould free.
- Virtually maintenance free wipe clean surface.
- Silver and white decor strips available.
- Recyclable PVC.
- 10 gloss finishes.
- A full range of PVC finishing trims are available in bright silver and gloss white.
- Geo-Panel PVC profiles are available in a stunning range of decors.
- Can be up to 50% cheaper than conventional tiling.
- No tiling or grouting to discolour or leak.
- Excellent insulation and sound proofing.

250mm Width
2.7m Height

Available with Silver and White Decor Strips in 2 Widths

Class 1 Fire rated - SUITABLE FOR COMMERCIAL AND DOMESTIC USE

freefoam
Building Products

ASSEMBLY INSTRUCTIONS

Geo-Panel PVC panels can be fixed directly to the wall if the surface is relatively even and if the wall is dry, using panel adhesive, or fix on to a frame of wooden batons.

When fitting Geo-Panel PVC panels to the ceiling, always fix to a frame of wooden batons.


When fixing Geo-Panel PVC panels to wooden batons, the panels can be fixed through the extending backplate fixing tongue using staples with a staple gun, by hammer with the panel pins/nails, with screws, or with panel adhesive.

- When fixing to the ceiling, adhesive should not be used, unless as an additional fixing combined with staples, panel pins/nails, or screws.
- To make a wooden frame, strap the wall with wooden batons placed approximately every 30-40cm according to the direction of assembly. If the panels are assembled vertically, strap in the opposite direction horizontally, and vice-versa. If panels are assembled diagonally, the batons can be installed vertically, horizontally or at right angles to the panels.
- Start with the preferred end moulding - end cap U, internal, external, or scotia.
- Glue the panel, or panel-pin (nail), staple or screw the first panel through the backplate fixing tongue opposite the starting side.
- Insert the tongue of the next panel into the groove and continue the installation of the panels in the same manner.
- Use appropriate PVC trims to finish all corners and ends.
- DECORATIVE CLIP-IN SILVER STRIP (8mm wide):** If a decorative clip-in silver strip is to be used, clip this into the groove before inserting the second and subsequent panels, then glue the panel, or panel-in (nail), staple or screw through the panel backplate fixing tongue.
- DECORATIVE H JOINT STRIP (20mm wide):** If a decorative H joint is used, insert the H joint before fixing the backplate of the first panel and before inserting the second and subsequent panels. Glue the first panel and H Joint, or panel-pin (nail), staple or screw through the H Joint backplate fixing tongue to fix both the H Joint and first panel. Before inserting the H joint, the panel tongues should first be trimmed off both sides of the panels.
- SEALING:** Seal the panels with silicone sealant between panel joints and trims and all ends if the panels are to be installed in a wet area such as in a shower or around a bath.
- CUTTING:** When cutting with a precision handsaw, cut with the decorative face of the panel upwards. When using an electric saw cut the panel with the decorative face of the panel downwards.

Geo-Panel PVC Panels can be fixed with:

Staples, panel pins, screws, panel adhesive

HOW TO FIT PVC PROFILES

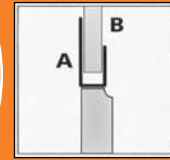

PVC END CAP U TRIM

To start or end the assembly of the panels.


White (GET8UTWH)
Silver (GET8UTSI)



PVC EXTERNAL CORNER TRIM


To make an outside corner

White (GET8ECWH)
Silver (GET8ECSI)

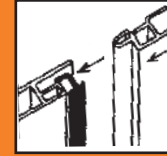

CLIP - IN

Decor strip
(GET7DCSI)

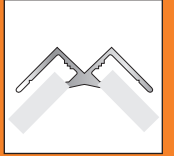

PVC INTERNAL CORNER TRIM

To make an inside corner

White (GET8ICWH)
Silver (GET8ICSI)



PVC H JOINT/DECOR STRIP

To make a H joining of panel edges or as silver and white decor strips

White (GET8HTWH)
Silver (GET8HTSI)



PVC SCOTIA TRIM

To finish the corner between wall and ceiling or floor and wall

White (GET8MWH)
Silver (GET8MSI)

GEO-PANEL PVC PANELS

Length: 2.7m x width 250mm. Pack contains 4 panels Covers 2.7sqm.
GEO-PANEL PVC PROFILES and decor strips available in lengths of 2.7m


SILVER STRIP WHITE GLOSS

2.7m x 200mm,
5 panels per pack

*4m long panel also available (GET8SWHC4)




WHITE/SILVER 2-STRIP*
(GET8SWHC)

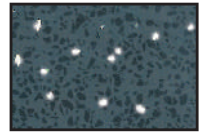


DIAMOND BLACK STONE
(GEBBDC)



DIAMOND WHITE STONE
(GEBWDC)

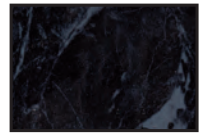


BLACK MARBLE
(GEBBMC)

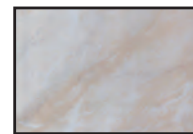

PERGAMON MARBLE
(GEBPMC)



LIGHT GREY MARBLE
(GEBLGM)

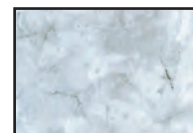

PASTEL GREY MARBLE
(GEBPGMC)



BLACK WOOD
(GEBBWC)



WHITE WOOD
(GEBWWGC)




WHITE GLOSS
(GEBWHC)

CEILING & WALL PANELS

GEO-PANEL DECORATIVE PVC PANELLING

Maintenance: **Abrasive cleaners and bleaches must NOT be used on Geo-panel panelling.**

H JOINT & CLIP-IN DECOR STRIPS

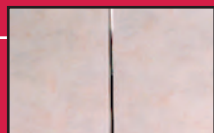

PVC Clip-in and H-joint Strips

For Tongue and Groove panelling. Available in Bright Silver and Gloss White.

Lengths 2.7m. used between T&G panel as design feature.

It may be necessary to trim off the panel tongues before fitting H-Joint decor strips

Freefoam Plastics Ltd.
Central Commercial Park
Centre Park Road
Cork
Ireland
T 021 496 6311
F 021 496 5273
sales@freefoam.com
www.freefoam.com

Freefoam Plastics (UK) Ltd.
77-83 St. James Mill Road
Northampton
NN5 5JP
UK
T 01604 591110
F 01604 580299
sales@freefoam.com

freefoam
Building Products